Data sheet No. DenA11411X00


Electronic transmitter / controller for the continuous measurement of the pH value or Redox (ORP) in water.

Transmitter AMI pH/Redox

- Measuring and control transmitter in a rugged aluminum enclosure (IP 66).
- Measuring range:

0 to 14 pH respectively -500 to +1500 mV

- Sensor connections for a pH or ORP sensor, reference electrode, Pt1000 temperature and for a digital sample flow meter (QV-Flow or deltaT-Flow).
- Galvanically separated sensor connections.
- Automatic temperature compensations according to Nernst with or without correction functions.
- Values for pH buffer solutions and redox calibration solution programmable.
- Big backlit LC display for the reading of measuring value, sample temperature, sample flow, temperature compensation type and operating status.
- Easy user menus in English, German, French and Spanish. Simple programming of all parameters by keypad.
- Electronic record of major process events and calibration data.
- Real-time clock for time stamp in data logs and for automated functions.
- Data logger for 1'500 data records stored at a selectable interval.
- Overvoltage protection for in- and outputs.
- Two current outputs (0/4 20 mA) for measured signals.
- Potential-free alarm contact as summary alarm indication for programmable alarm values and for instrument faults.

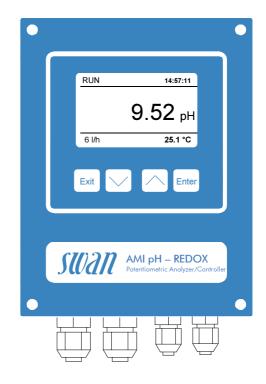

- Two potential-free contacts programmable as limit switch or PID-control.
- Input for potential-free contact to freeze the measuring value or to interrupt control in automated installations (hold function or remote-off).

Order Nr.	Transmitter AMI pH/Redox AC	A-11.411.100
	Transmitter AMI pH/Redox DC	A-11.411.200
Option:	[] 3 rd current signal output (0/4 – 20mA)	A-81.420.050
	[] Profibus DP & Modbus RTU interface (RS-485)	A-81.420.020
	[] USB interface	A-81.420.042
	[] HART interface	A-81.420.060

Transmitter AMI pH/Redox

Data sheet No. DenA11411X00

pH / ORP Measurement

Signal inputs galvanically separated. Input resistance: $> 10^{13} \Omega$

pH measurement

Measuring range: 0.00 to 14.00 pH Resolution: 0.01 pH Reference temperature: 25 °C

ORP measurement

Measuring range: -500 to +1500 mV Resolution: 1 mV

Temperature compensations

automatic, according to:

- Nernst (for potable water and wastewater)
- Nernst with non-linear solution compensation (for high purity water)
- Nernst with linear compensation with selectable coefficient (for high purity water)

Calibration solutions table

Programmable table for pH buffers and ORP calibration solution.

Sensor monitoring

Indication of glass breakage and line disconnection.

Temperature measurement

with SWAN Pt1000 sensor.

Measuring range: -30 to +130 °C Resolution: 0.1 °C

Sample flow measurement

with digital sample flow meter.

Transmitter Specifications and Functionality

Electronics case: Cast aluminum Protection degree: IP 66 / NEMA 4X Display: backlit LCD, 75 x 45 mm Electrical connectors: screw clamps 180 x 140 x 70 mm Dimensions: Weight: 1.5 kg Ambient temperature: -10 to +50 °C Humidity: 10 - 90 % rel., non cond.

Power supply

AC version: 100–240 VAC (±10 %), 50/60 Hz (±5 %)
DC version: 10–36 VDC
Power consumption: max. 35 VA

Operation

Easy operation based on separate menus for "Messages", "Diagnostics", "Maintenance", "Operation" and "Installation".

User menus in English, German, French and Spanish.

Separate menu specific password protection.

Display of process value, sample flow, alarm status and time during operation.

Electrical Connection Scheme AMI V2.5 CASETEMP DISPLAY KEYPAD RELAY1 A/D ALARM RELAY PROCESSOR CALARM GREEN WHITE SIGNAL OUT 1 COMMON + ALTERNATIVE 1 40 BROWN MOT SIGNAL OUT 2 WHITE OPTIONS USB-STICK \bigcirc 'HOLD N/(-AC/DC

Storage of event log, alarm log and calibration history.

Storage of the last 1'500 data records in logger with selectable time interval.

Real-time clock with calendar

For action time stamp and preprogrammed actions

Safety features

inputs and signal outputs.

No data loss after power failure, all data is saved in non-volatile memory. Overvoltage protection of in- and outputs. Galvanic separation of measuring

Transmitter temperature monitoring with programmable high/low alarm limite

1 Alarm relay

One potential free contact for summary alarm indication for programmable alarm values and instrument faults.

Maximum load: 1A / 250 VAC

1 Input

One input for potential-free contact.

Programmable hold or remote off function

2 Relay outputs

Two potential-free contacts programmable as limit switches for measuring values, controllers or timer for system cleaning with automatic hold function.

Max. load:

1A / 250 VAC

2 Signal outputs (3rd optional)

Two programmable signal outputs for measured values (freely scaleable, linear or bilinear) or as continuous control output (control parameters programmable) as current source. 3rd signal output selectable as current source or current sink.

Current loop: 0/4 - 20 mA Maximum burden: 510Ω

Control functions

Relays or current outputs programmable for 1 or 2 pulse dosing pumps, solenoid valves or for one motor valve. Programmable P, PI, PID or PD control parameters.

1 Communication interface (option)

- RS485 interface (galvanically separated) with Fieldbus protocol Modbus RTU or Profibus DP
- 3rd signal output
- USB interface
- HART interface